

## Inserting the batteries




- ▶ 4 × 1.5 V type AAA (LR03)

## Programming the access code

**FCT 10**

**1**

- ▶ Press a button to illuminate the keypad
- ▶ Press the key button

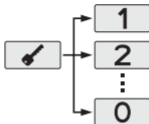

- ▶ Press numerical key **1** for the **1st** memory space or numerical key **2** for the **2nd** memory space or numerical key **0** for the **10rd** memory space

**2**



- ▶ Press the key button

**3**



- ▶ Enter the 4 to 6-digit personal code

**4**



- ▶ Press the key button

**5**




- ▶ Enter the personal code again

**6**



- ▶ Press the key button


## Teaching in a radio code

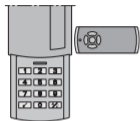

- ▶ Hold the hand transmitter to the right of the FCT 10.
- ▶ Press and hold the hand transmitter button whose radio code is to be inherited until the LED flashes alternately in red and blue.



- ▶ Press a button to illuminate the keypad.
- ▶ Enter the personal code for the device whose radio code is to be changed.

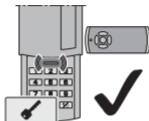

- ▶ Press and hold the key button. If a radio code is recognised, the LED flashes quickly and then goes out after 2 seconds.
  - ▶ Release the keys

## FCT 10

### Normal operation

If the radio code for a personal code was copied from another hand transmitter beforehand, the key switch must be pressed a second time after entering the personal code during initial start-up.