 


Inserting the batteries




- ▶ 4 × 1.5 V type AAA (LR03)

Programming the access code

FCT 3

1

 - ▶ Press a button to illuminate the keypad
- ▶ Press the key button



- ▶ Press numerical key **1** for the **1st** memory space or numerical key **2** for the **2nd** memory space or numerical key **3** for the **3rd** memory space

2



- ▶ Press the key button

3



- ▶ Enter the 4-digit personal code

4



- ▶ Press the key button

5



 
- ▶ Enter the personal code again

6



- ▶ Press the key button


Teaching in a radio code



- ▶ Hold the hand transmitter to the right of the FCT 3.
- ▶ Press and hold the hand transmitter button whose radio code is to be inherited until the LED flashes alternately in red and blue.



 - ▶ Press a button to illuminate the keypad.
- ▶ Enter the personal code for the device whose radio code is to be changed.



- ▶ Press and hold the key button. If a radio code is recognised, the LED flashes quickly and then goes out after 2 seconds.
 - ▶ Release the keys

FCT 3

Normal operation

If the radio code for a personal code was copied from another hand transmitter beforehand, the key switch must be pressed a second time after entering the personal code during initial start-up.